

## TASK: Will Not Raise or Lower - 1" Cordless Horizontal Aluminum


Use If/When: Cordless blind will not raise or lower

Tools Needed: Flathead screwdriver

1. If possible, raise blind fully. Remove blind from installation brackets using a flathead screwdriver. Insert tip of screwdriver between the back of the headrail and the bracket. (If the blind will not raise, an assistant will be needed to raise the blind and hold the stack out of the way.)




2. Try to raise and lower blind to see if it works outside of the brackets. If the blind raises and lowers, reposition the brackets so they are free of the internal components. (If it still does not operate, continue to step 3.)

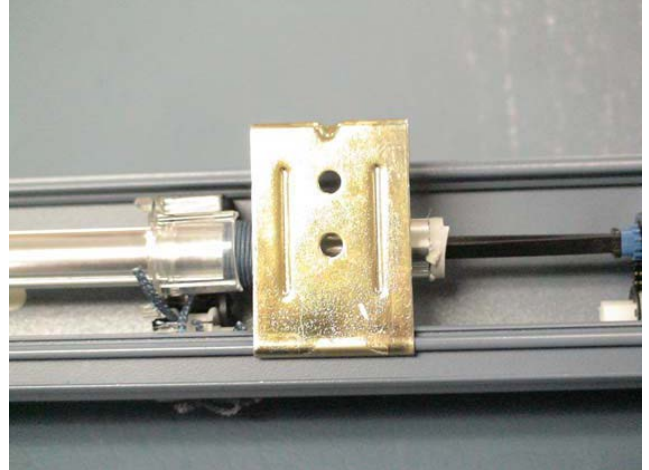

3. Remove dust cover, starting with top corner. Run your finger across the top. Put pressure on the back to remove.  
**Note:** Do not remove the end caps.



4. Make sure the cords are not twisted or overlapped in the headrail. If they are, lower the blind completely, then raise slowly allowing the cords to wrap flat around the pinion rod.

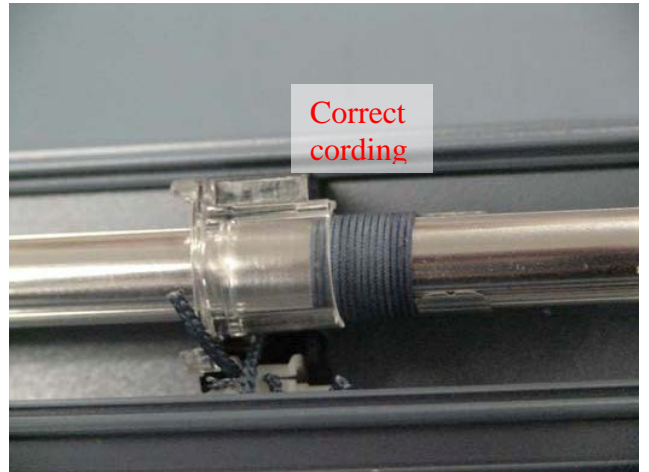

## TASK: Will Not Raise or Lower - 1" Cordless Horizontal Aluminum

Use If/When: Cordless blind will not raise or lower

Tools Needed: Flathead screwdriver

5. Replace the dust cover. Raise and lower the blind several times to ensure proper operation.



6. Reinstall blind back into brackets by attaching front of blind to the front of the brackets and pushing back on blind until it snaps into place.

