

SPRINGS WINDOW FASHIONS Customer Service

TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors

5. Remove the headrail from the mounting brackets by placing a flat head screwdriver between the back of the headrail and the release clip on the mounting clip. Pull the handle of the screwdriver toward the front of the headrail and tilt the back of the headrail down and toward you.	 Lay the headrail on a clean flat surface with the louver stems pointed toward the ceiling.
 Insert stem replacement tool under the gear. Squeeze to release the louver stem. 	8. Remove the louver stem.

SPRINGS WINDOW FASHIONS Customer Service

TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors



SPRINGS WINDOW FASHIONS Customer Service Page 3 of 4

TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors

- **13.** The G98 Magnum/UltraVue has self-aligning carriers that can be engaged by pulling the rotation chain fully in both directions. The chain will need to be pulled until clicking can be heard and when the stems are turned back to the open position and they are all aligned together.
- **14.** Once the headrail is operating properly, reinstall the headrail into the mounting clips and rehang the louvers in the open position. All louvers should be in the same position.





SPRINGS WINDOW FASHIONS Customer Service